

FAQ

Why is the time displayed in the relay off by hours?

Since using communication protocols like IEC61850 relay receives UTC time the relays clock has to be corrected by setting up a time zone. When connected to relay it can be done in *Commands* → *Set time zone*.

